


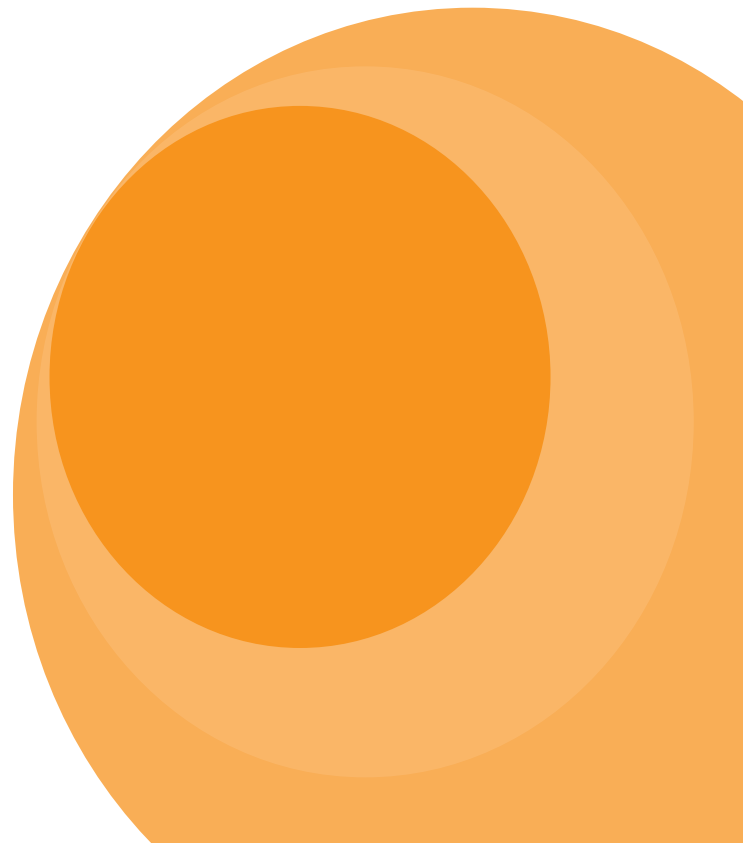

Cisco 7911 User Guide






 



Telephone: 020 3056 5060








Flip Solutions Ltd t/a Flip Connect, Unit 5/6,
29 Mill Lane, Welwyn, Hertfordshire, AL6 9EU





- | | | |
|---------------------------------------|----------------------|------------------------------|
| 1 Voicemail / Ringer Indicator | 5 Menu Button | 9 Toggle / Navigation |
| 2 Monitor | 6 Volume Bar | |
| 3 Display | 7 Dial Pad | |
| 4 Softkeys | 8 Hold Button | |

Phone Basics	
Changing ring tones	<p>Press the menu button () then option 3 () > option 1 () > option 1 () > option 1 (), then using the toggle button () select the tone of your choice.</p> <p>Press the Select softkey and then Save softkey to save.</p>
Setting the ring volume	<p>With the handset in its cradle, press the volume bar () up to increase, down to decrease, This will automatically save.</p>
Setting the speaker volume	<p>Press the NewCall softkey then press the volume bar () up to increase, down to decrease, press the Save softkey to complete.</p>
Setting the earpiece volume	<p>Lift the handset then press the volume bar () up to increase, down to decrease, press the Save softkey to complete.</p>

Call Control	
Group pickup	<p>To answer another phone that is part of your group, lift the handset and dial * 0 6 ()</p>
DC pickup	<p>To answer another phone that is NOT part of your group, lift the handset and dial * 1 2 () then dial the extension number of the ringing phone.</p>
Place a call on hold	<p>Whilst on a call, press the hold button () the caller will then be on hold, to retrieve the call, press the hold button again.</p>
Call Waiting	<p>Whilst on a call, you will be notified of the second caller by a beeping noise through the earpiece and the number will be displayed on the screen.</p> <p>To answer the waiting caller, press the Answer softkey, the first call will then be placed on hold.</p> <p>You can switch between the calls using the toggle button (), highlight the call required and press the hold button (), it will flash red to indicate a call is on hold.</p>
Transferring Calls	<p>To transfer your call, press the More softkey, then the Transfer softkey, dial the extension number for internal transfer, or the full CLI to transfer to an external phone number. To complete the transfer, hang up the call.</p> <p>If you need to cancel the transfer and connect the call back to yourself, use the toggle button (), highlight the call and press the hold button ().</p>






Call Control cont.

Call Forwarding	<p>In order to forward all incoming calls another number, press the Forward softkey, enter the destination number then the EndCall softkey to complete.</p> <p>To remove the forward, press Forward softkey and then the EndCall softkey.</p>
-----------------	---

Call Conferencing

Ad-Hoc Conferencing	<p>With your first caller connected, press the More softkey then the Confrn softkey - this will place the first caller on hold. Dial the extension number or full CLI of the second caller. To connect all calls, press the More softkey then the Confrn softkey.</p>
---------------------	---

Voicemail

Voicemail management	<p>To access the portal, you can either press the Message softkey or the menu button (); You can the Record a greeting by using option 5 ()</p>
Listening to your voicemails	<p>When you have a voicemail, the voicemail indication light will turn red, to listen to your voicemails, press the Msgs softkey and follow the instructions given through the handset.</p>
Remote voicemail access	<p>In order to access your voicemail from another phone;</p> <p>If it is an internal phone, you can lift the handset and dial    then enter your extension number and password following the instructions given through the handset.</p> <p>To access from an external phone, dial your full CLI, wait for the voicemail prompt, then press the star key and follow the instructions given.</p>

Further Support:

If you require further assistance our support pages have lots of ways to help you:

- There is an FAQs - click here - you can then ask questions and have them answered by community members.
- You can raise a support ticket here.
- Our User Guides, here you will find PDFs and interactive video tutorials.

Alternatively you can ring the support helpline on **020 3056 5060** or email tickets@flipconnect.co.uk - this will open a ticket and reply with your trackable reference number.

